

Price List

序号	名 称		图 号	机 型	重 量
1	Eccentric bush	偏心套衬套	442.9357-01	CH880	589
2	Eccentric bush	偏心套衬套	442.9359-01	CH880	589
3	Eccentric bush60.64.68.70	偏心套衬套	442.9360-01	CH880	589
4	Eccentric bush36.40.44.48	偏心套衬套	442.9358-01	CH880	589
5	Bottom Shell Bushing	下架体衬套	442.9248-01	CH880	375
6	Ecc. wearing plate	耐磨板	442.9249-01	CH880	50
7	Main shaft step	主轴防磨板	442.9723-01	CH880	100
8	Piston wearing plate	活塞防磨板	442.9724-01	CH880	95
9	Locating Bar	定位板	442.9308-01	CH880	3
1	Eccentric bushing32.37.42.47	偏心套衬套	452.0805-001	CH870	420
2	Eccentric bushing47.52.57.62	偏心套衬套	452.0806-001	CH870	420
3	Eccentric bushing62.68.74.80	偏心套衬套	452.0807-001	CH870	420
4	Bottom Shell Bushing	下架体衬套	452.0795-001	CH870	255
5	Ecc. wearing plate	耐磨板	452.0808-001	CH870	43
6	Main shaft step	主轴防磨板	452.0507-001	CH870	66
7	Piston wearing plate	活塞防磨板	452.0538-001	CH870	61
8	Locating Bar	定位板	452.0834-001	CH870	3
1	Eccentric bush20 25 30 35 40	偏心套衬套	442.9033-01	CS660	213
2	Eccentric bush18.20.24.28	偏心套衬套	442.8824-01	CH660	208
3	Eccentric bush28 32 36 40	偏心套衬套	442.8825-01	CH660	208
4	Eccentric bush40 44 48 50	偏心套衬套	442.8826-01	CH660	208
5	Bottom shell bushing	下架体衬套	442.8742-01	CH660	172.5
6	Eccentric wear plate	耐磨板	442.8761-01	CH660	24.5
7	Main shaft step	主轴防磨板	442.8732-01	CH660	38
8	Piston Wearing Plate	活塞防磨板	442.8730-01	CH660	37.5
9	Locating Bar	定位板	442.8762-01	CH660	3
1	Ecc.bushing20 25 30 36	偏心套衬套	442.8067-01	CS440	138
2	Bottom Shell Bushing	下架体衬套	442.7146-01	CH440	103
3	Main shaft step	主轴防磨板	442.7120-01	CH440	25
4	Piston wearing plate	活塞防磨板	442.7122-01	CH440	24.5
5	Wearing Plate	耐磨板	442.7107-01	CH440	22
6	Ecc.bushing32 36 40 44	偏心套衬套	442.9406-01	CH440	130

Price List

序号	名 称		图 号	机 型	重 量
7	Ecc.bushing24 28 32	偏心套衬套	442.9642-01	CH440	130
8	Ecc.bushing13 16 20 24	偏心套衬套	442.9643-01	CH440	130
9	Locating Bar	定位板	442.7110-01	CH440	2.8
1	Eccentric bush16 19 22	偏心套衬套	442.7923-01	CH430	68
2	Eccentric bush22 25 29	偏心套衬套	442.7924-01	CH430	68
3	Eccentric bush29 32 34 36	偏心套衬套	442.7925-01	CH430	68
4	Wearing Plate	耐磨板	442.7927-01	CH430	13
5	Bottom shell bushing	下架体衬套	442.7935-01	CH430	61.5
6	Main shaft step	主轴防磨板	442.7895-01	CH430	12
7	Piston wearing plate	活塞防磨板	442.7893-01	CH430	13
8	Eccentric bush16 20 25 30	偏心套衬套	442.8486-01	CS430	76
9	Locating Bar	定位板	442.7928-01	CH430	1.3
1	Main shaft step plate	主轴防磨板	442.6138-01	CH420	9
2	Piston wear plate	活塞防磨板	442.6139-01	CH420	8
3	Wearing plate	耐磨板	442.6130-01	CH420	8
4	Bottom shell bushing	下架体衬套	442.6131-01	CH420	43
5	Eccentric bush13 16 18	偏心套衬套	442.9657-01	CH420	40
6	Eccentric bush18 20 22	偏心套衬套	442.9658-01	CH420	40
7	Eccentric bush22 25 28	偏心套衬套	442.9659-01	CH420	40
8	Eccentric bush13 16 20 25	偏心套衬套	442.9688-01	CS420	46
9	Loating Bar	定位板	442.6143-01	CH420	1

美卓备件号	品名	机型	重量
1022072951	偏心铜套	HP200	29.5
1022145719	动锥上铜套	HP200	8.2
1022145730	动锥下铜套	HP200	29
1048721001	球面瓦	HP200	28
1022061401	水平轴铜套	HP200	7.5
1057602103	上推力轴承	HP200	12
1022130524	主机架销套	HP200	1

1022073307	偏心铜套	HP300	49.5
7015656200	动锥上铜套	HP300	12
1022145975	动锥下铜套	HP300	49
7035800600	球面瓦	HP300	48
1022063300	水平轴铜套	HP300	12.6
1057612200	上推力轴承	HP300	22
1022130525	主机架销套	HP300	1.3

1022074069	偏心铜套	HP400	79
1022147349	动锥上铜套	HP400	25
1022147350	动锥下铜套	HP400	104
N35800601	球面瓦	HP400	67
1022062210	水平轴铜套	HP400	14
1057605169	上推力轴承	HP400	30
1022133692	主机架销套	HP400	2

1022074809	偏心铜套	HP500	113
1022147321	动锥上铜套	HP500	31
N15655252	动锥下铜套	HP500	137
1048723201	球面瓦	HP500	110
1022065500	水平轴铜套	HP500	20
1057605168	上推力轴承	HP500	50
1022139802	主机架销套	HP500	2.3

171551	偏心铜套 E20	GP100	52
171564	偏心铜套 E25	GP100	52
171565	偏心铜套 E16	GP100	52
285062	机架铜套	GP100	60
941532	止推轴承	GP100/GP100S	
285063	环	GP100	9
285064	压板	GP100	2.3
171455	偏心铜套E25	GP100S	52
171456	偏心铜套 E20	GP100S	52
171457	偏心铜套 E16	GP100S	52

MM0315148	框架轴承衬套	GP11	80
285344	偏心铜套E25	GP11	68

美卓备件号	品名	机型	重量
285385	偏心铜套E30	GP11	68
285417	偏心铜套E20	GP11	67
941534	止推轴承	GP11	
203109	机架铜套	GP11	80
MM0273426	偏心铜套	GP11	

941535	止推轴承	GP200S	
942951	机架铜套	GP200	60
908527	偏心铜套	GP200S	71.84
933617	偏心铜套	GP200	73
MM0524454	推力轴承	GP200/GP200S	9.78
MM1102104	轴承	GP220	7.2
MM0537909	机架铜套	GP250	57

MM0227358	偏心铜套	GP300	80
931714	机架铜套	GP300/S	74
MM0266967	偏心铜套	GP300	79.5
188325	偏心铜套	GP300S	79
MM0315834	偏心套	GP300S	
MM0315854	偏心套	GP300S	81.5
MM0521380	止推轴承	GP300/S	
292723	止推轴承	GP300	14.96
MM0523930	止推轴承	GP300/S	15.7
938379	止推轴承	GP300/S	
MM0244630	偏心铜套	GP300S	79.29
MM0227940	偏心铜套	GP300S	79.59

11022075485	偏心衬套套	MP800	321
11022066796	水平轴铜套	MP800	50
11022147761	动锥下铜套	MP800	390
11022147770	动锥上铜套	MP800	129
11048724031	球面瓦	MP800	221
11057610201	上推力轴承	MP800	133
11022140700	销套	MP800	8.5

11022075736	偏心衬套	MP1000/1250	456
11022070708	水平轴铜套	MP1000/1250	58.2
11022148833	下衬套	MP1000/1250	459
MM0344927	上衬套	MP1000	159
11048727629	球面瓦	MP1000	410
11057605258	上推力轴承	MP1000/1250	202
1022140676	销套	MP1000	22

序号	规格	原图号	名称	图重
1	2Ft	22144201	机架衬套	36
2	2Ft	22066641	主轴衬套	22
3	2Ft	48722335	碗形瓦	29.5
4	2Ft	22135241	传动轴套	9.6
5	2Ft	57596001	中推力板	4.5
6	2Ft	57595701	下推力板	4.5
7	3Ft	22145321	机架衬套	72
8	3Ft	22060762	传动轴瓦	11.5
9	3Ft	22070561	主轴衬套	49
10	3Ft	22071401短头	主轴衬套	50
11	3Ft	48723565	碗形瓦	36
12	3Ft	48724795短头	碗形瓦	42
13	3Ft	57597801	下推力板	8.5
14	4Ft	22145601	机架衬套	138
15	4Ft	22144481	主轴衬套	75
16	4Ft	48725205	碗形瓦	72
17	4Ft	57599601	下推力板	22
18	4Ft		传动轴套	17
19	4 1/4Ft	22145885	机架衬套	154
20	4 1/4Ft	22062090	传动轴瓦	17
21	4 1/4Ft	22143930	主轴衬套	100
22	4 1/4Ft	48726430	碗形瓦	69
23	4 1/4Ft	48726435	碗形瓦	75
24	4 1/4Ft	57602601	下推力板	22
25	5 1/2Ft	22146161	机架衬套	315
26	5 1/2Ft	22065840	传动轴瓦	23
27	5 1/2Ft	22145706	主轴衬套	177
28	5 1/2Ft	48727050	碗形瓦	195
29	5 1/2Ft	57603501	下推力板	30
30	5 1/2Ft	22134800	小铜套	4
31	7Ft	22140636	铜套	6.5
32	7Ft	22068500	传动轴套	29
33	7Ft	22147564	机架衬套	472
34	7Ft	22146721	衬套	323
35	7Ft	48728520	碗形瓦	310
36	7Ft	57607401	下推力板	50
37	7Ft	48728485	碗形瓦	295